


**VERTICAL DOWNTURN
TERMINATION WITH
ARDEX PRESSURE SEAL**

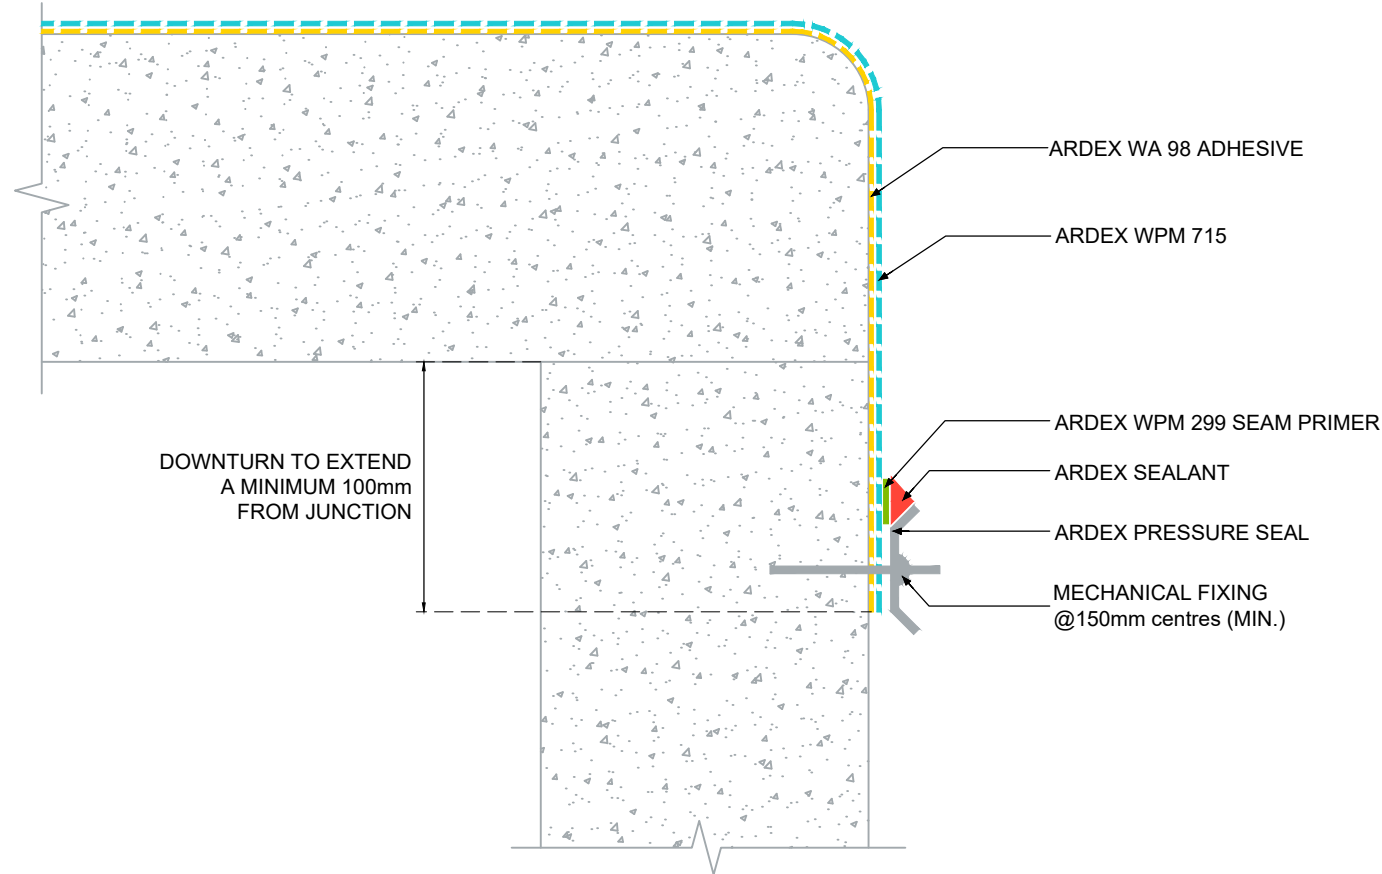

NOTES

ARDEX WPM 715 must be solvent wiped (allow to flash off) then apply ARDEX WPM 299 SEAM PRIMER (allow to dry) prior to ARDEX SEALANT application directly onto ARDEX WPM 715.

ARDEX SEALANT:

- ARDEX RA 050
- ARDEX CA 20 P PLUS



The technical details, recommendations & other information contained in this drawing is given in good faith & represents the best of our knowledge and experience at the time of design. It is your responsibility to ensure that our products are used used correctly in accordance with any applicable Australian Standard, our instructions & recommendations are only for the uses they are intended. We also reserve the right to update information without prior notice to reflect our ongoing research and development program. Country specific recommendations, depending on local standards, codes of practice, building regulations and industry guidelines may effect specific installation recommendations. The supply of our products and services are also subject to certain terms, warranties & exclusions which are available to you on request

FILE NAME	VERTICAL DOWNTURN TERMINATION WITH ARDEX PRESSURE SEAL
DRAWN	27/08/2024 by AD
CHECKED	ADAM MCGLONE
SIZE	A4

ARDEX AUSTRALIA
www.ardexaustralia.com

SCALE NTS
DRAWING D144