

**PERIMETER BALCONY
EDGE DETAIL - ARDEX
WELDTEC™ MEMBRANE**


NOTES

ARDEX Membrane is not to block the weep hole(s) under any circumstance.

ARDEX PRIMER for ARDEX WPM 310 or ARDEX WPM 330 includes:

- ARDEX WPM 270
- ARDEX WPM 300

Carefully remove the fleece on the ARDEX WELDTEC™ MEMBRANE using the hot air welding equipment and ensure all loose fleece is totally removed from the area prior to application of ARDEX STB / STA TAPE, ARDEX RA 050, or ARDEX CA 20 P PLUS.

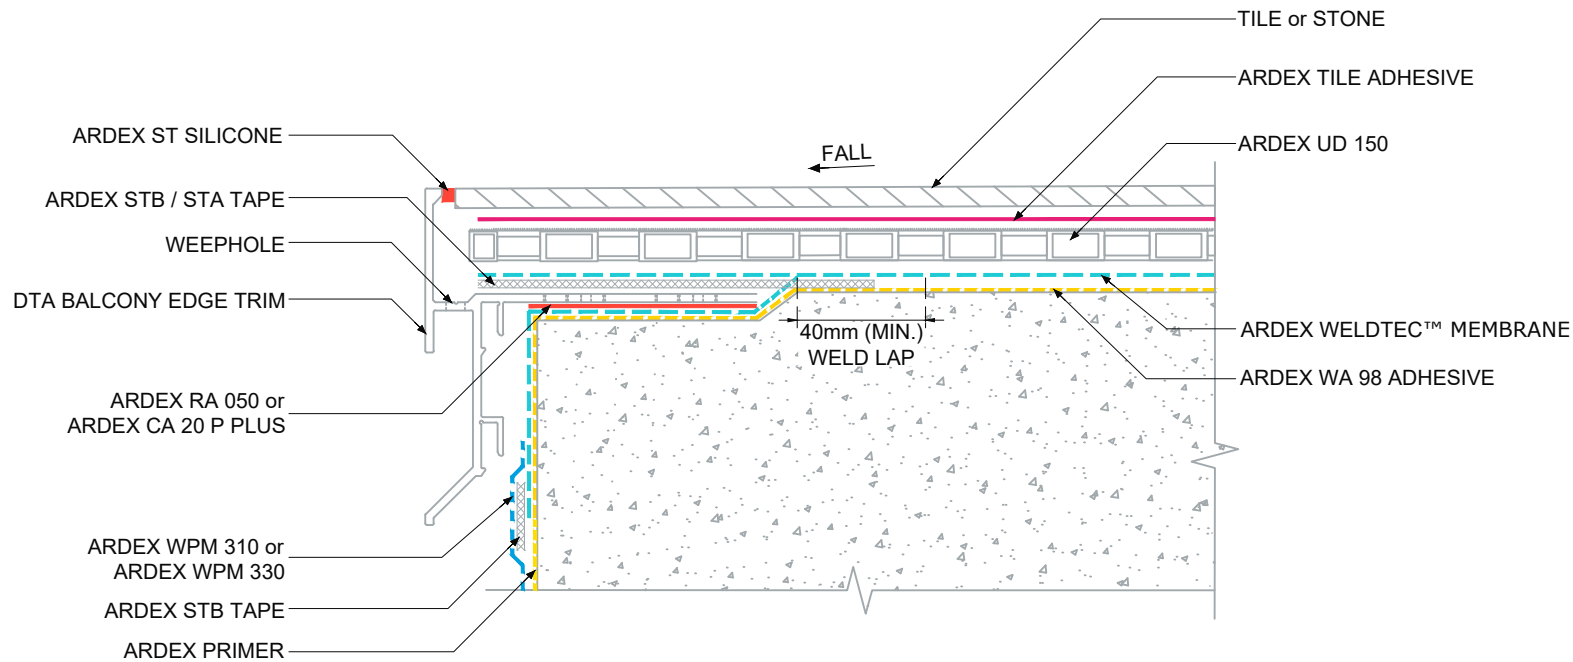

The technical details, recommendations & other information contained in this drawing is given in good faith & represents the best of our knowledge and experience at the time of design. It is your responsibility to ensure that our products are used used correctly in accordance with any applicable Australian Standard, our instructions & recommendations are only for the uses they are intended. We also reserve the right to update information without prior notice to reflect our ongoing research and development program. Country specific recommendations, depending on local standards, codes of practice, building regulations and industry guidelines may effect specific installation recommendations. The supply of our products and services are also subject to certain terms, warranties & exclusions which are available to you on request

FILE NAME PERIMETER BALCONY EDGE DETAIL - ARDEX WELDTEC™ MEMBRANE

DRAWN 22/10/2024 by AD

CHECKED ADAM MCGLONE

SIZE A4

ARDEX AUSTRALIA
www.ardexaustralia.com

SCALE NTS

DRAWING D160