


**RAISED BASE PLATE
FIXING - OPTION 1**

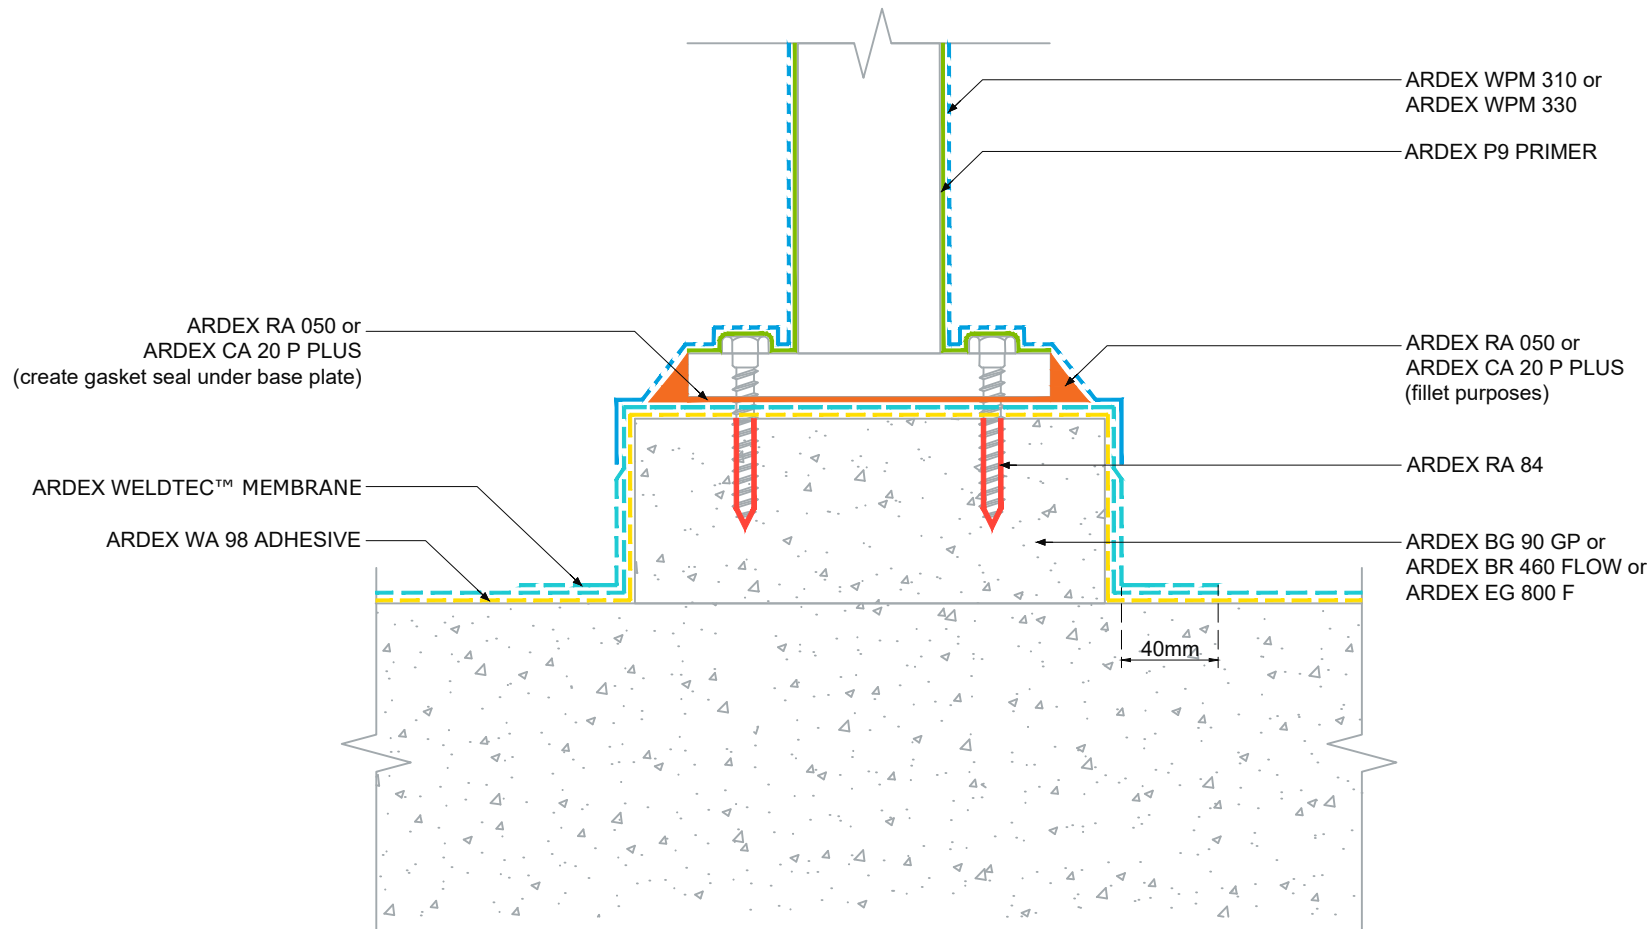

NOTES

Apply ARDEX RA 84 into all predrilled holes before placement of base plate fixings.

Prior to either product ARDEX RA 050 or ARDEX CA 20 P PLUS being directly applied on the membrane, carefully remove the fleece on the ARDEX WELDTEC™ MEMBRANE using the welding equipment and ensure all loose fleece is totally removed from the area.

ARDEX WELDTEC™ MEMBRANE does not include ARDEX WPM 715



The technical details, recommendations & other information contained in this drawing is given in good faith & represents the best of our knowledge and experience at the time of design. It is your responsibility to ensure that our products are used used correctly in accordance with any applicable Australian Standard, our instructions & recommendations are only for the uses they are intended. We also reserve the right to update information without prior notice to reflect our ongoing research and development program. Country specific recommendations, depending on local standards, codes of practice, building regulations and industry guidelines may effect specific installation recommendations. The supply of our products and services are also subject to certain terms, warranties & exclusions which are available to you on request

FILE NAME RAISED BASE PLATE FIXING - OPTION 1

DRAWN 27/11/2024 by AD

CHECKED ADAM MCGLONE

SIZE A4

ARDEX AUSTRALIA
www.ardexaustralia.com

SCALE NTS

DRAWING D208