

wedi Builders Choice Bathroom Systems



The Only Waterproof Bathroom System



...wedi®
an ARDEXGROUP Company

What is wedi?


- wedi is a tested, certified and proven, 100% waterproof ready to tile shower system, produced by a single source manufacturer in Germany with over 40 years of industry experience.
- The wedi Shower System is the perfect substrate for tile or stone, offering a pre-sloped yet flat surface and also a superior bond surface for any tile and stone adhesive.
- wedi eliminates the need for liquid applied membranes, ensuring a risk free installation with no possibility of failure due to pin holes, tearing, or incorrect application.
- The wedi blue XPS closed cell foam core is 100 % waterproof, mould and mildew proof and remains fully functional even after partial damage.
- wedi building boards can be used as an underlayment and are rated for heavy duty commercial use once tiled.
- The wedi Shower System replaces screed and liquid membrane, which often fail due to expansion and contraction.
- Total installation time is a few hours ready for tile versus 4 days of installation and drying times.
- The wedi Shower System is lightweight, quick, easy to cut and clean to install. The modular, versatile, and easy to modify design allows you to go from framework to ready to tile in just a few hours – the fastest installation process in the industry.
- The wedi Shower System comes with one of the industry's most comprehensive warranties, offering 10* years coverage.




* 15 years for New Zealand

What is wedi made of?

- All wedi foam products are made of the same high quality XPS foam core for consistency throughout the entire product line, which is 100 % waterproof, mold and mildew-proof, and HBCD (Hexabromocyclododecane) free.
- The grey cement resin coating provides a durable, flat surface for any tile and stone adhesive. No delamination, no deterioration, no surprises.
- The fiberglass mesh reinforcement is embedded into the cementitious coating and provides strength and rigidity to support a lasting tile bond and backing.

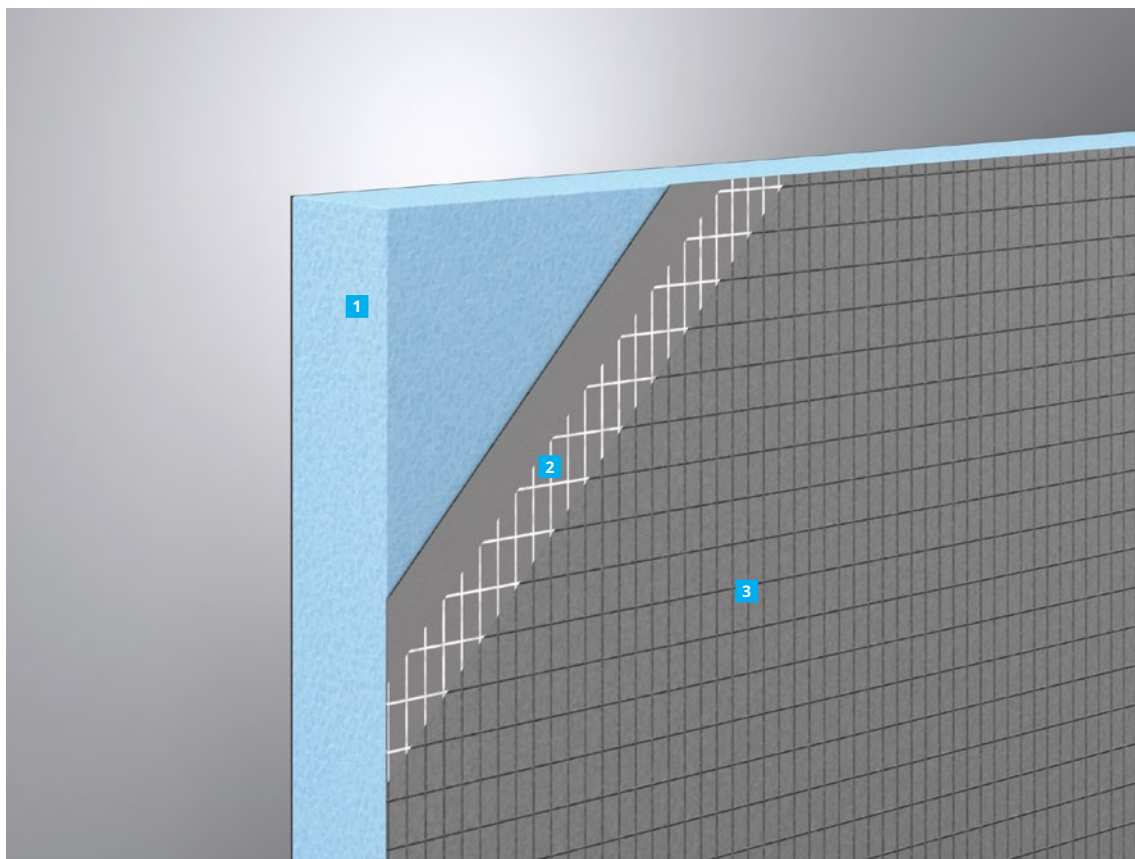

- 1 XPS waterproof foam core 2 Fiberglass mesh reinforcement 3 Cement resin coating

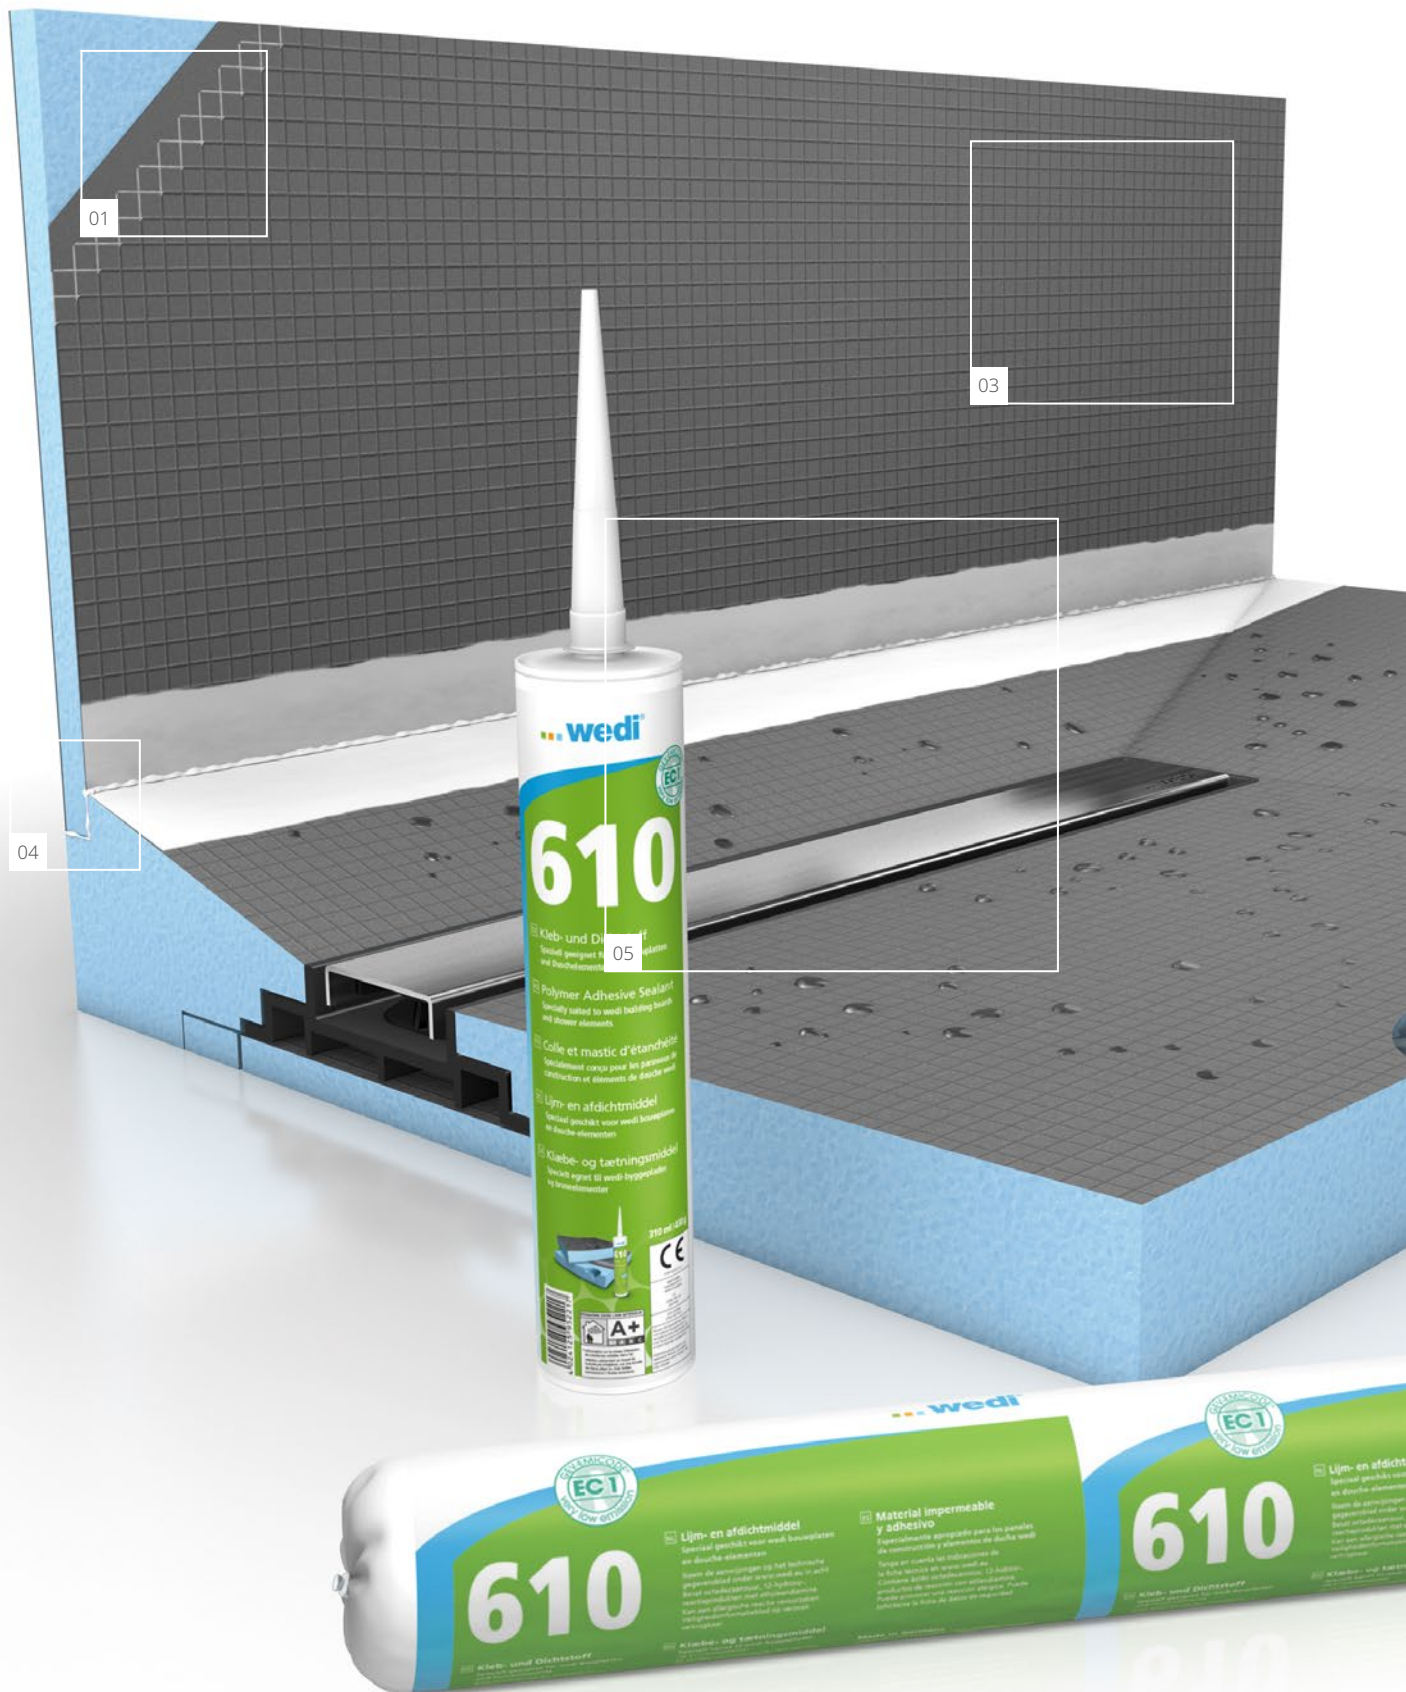

wedi – Only real with a blue core


1 wedi Building Board's reinforced cement resin surface offers a superior bond surface to virtually any tile and stone or tile adhesive. No delamination, no surprises.

2 The blue XPS core is 100% waterproof and remains fully functional even after possible partial damage. Our XPS brand foam is specially engineered for 100% consistency of its closed cell structure.

3 wedi product surfaces include specially designed and manufactured fiberglass mesh, fully embedded in the coating. It won't break and it offers the wedi typical gritty structure for perfect tile adhesion.

4 wedi Building Boards can be safely adhered and sealed in assemblies using wedi 610 adhesive sealant: strong reinforcement and internal strength, high adhesion and waterproofing qualities with virtually no build up as with conventional taping. As no other seal is necessary, tradesmen and tradeswomen benefit from increased protection accompanied by a shorter surface preparation time before tiling starts.

5 wedi Building products are CFC, HCFC, HFC free and instead CO₂ is used as extrusion agent. This reduces wedi's Global Warming Impact (GWP) to 1. This compares to GWPs in the thousands, as is common with several HFC generation agents still used today particularly in products made in China. Another crucial benefit of wedi's brand foam is the safe fire behavior but without the use of bioaccumulative un-bonded flame retardants such as HBCD which are still widely used. Instead, bonded polymeric flame retardants (PFR) are used and meet international standards such as REACH and the UN's Stockholm Convention Protocols. wedi 610 adhesive sealant is Polyisocyanate and PVC free, and is a zero VOC sealant.

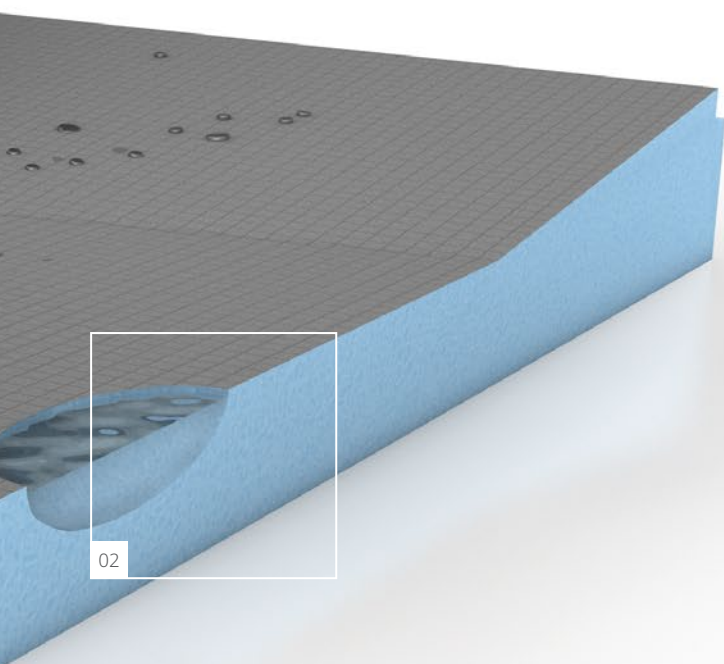

What is the wedi Bathroom System?


Part 1: Shower Bases

wedi Waterproof Shower Systems offer reliable, cost-efficient solutions for constructing 100% waterproof showers which are mould-proof, pre-falled and ready to tile.




Part 2: Building Panels

wedi Building Panels are the ultimate versatile wet room tile backer board, and often used within the range of wedi shower systems as well as on walls, floors, countertops, and many more applications.

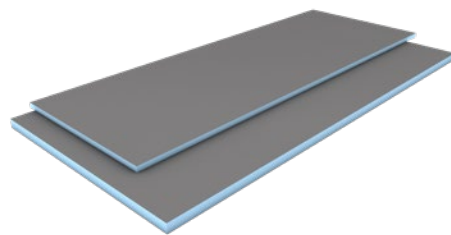

Part 3: Prefabricated Modules

wedi Prefabricated Modules open up a whole new world of design possibilities for showers, wet areas, and baths. Options include: niches, seats, benches and hob designs.

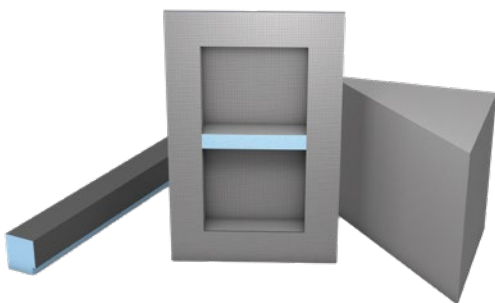

Part 4: Installation Accessories

wedi Installation Accessories & Tools offer additional products needed for the installation, and guarantee maximum safety, and easy handling.




wedi Warranty

wedi provides a unique, strong and very comprehensive 10*-Year General Warranty that addresses true risks and damages that may originate from a defective product. In addition to our standard 10*-Year General Warranty, wedi offers an extended 15 or 20-Year Warranty available to cover projects registered by wedi PRO certified installers.

Find details on wedi's warranty programs by simply asking your local sales representative.

- wedi's performance shower systems, unprecedented warranty coverage and service combine for wedi installers
- Sign up for wedi PRO certification classes and enjoy wedi's 15 or 20-year full package warranty options

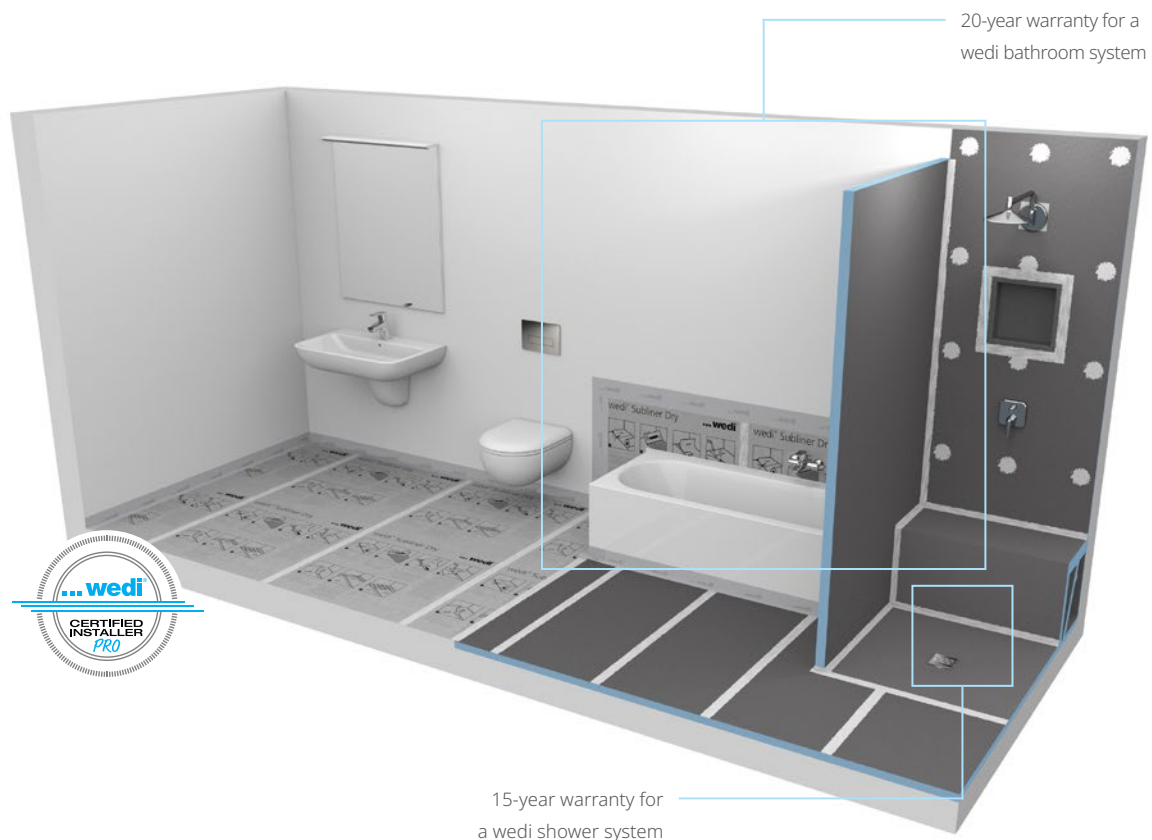

* 15 years for New Zealand




How does the system work?

Whether for new construction, renovation, or refurbishment projects, wedi solutions combine premium-quality materials with innovative design and advanced functionality. All wedi system components are fully compatible, rigorously tested, certified, and 100% waterproof when installed as a complete system – delivering long-term reliability backed by a manufacturer's warranty.

How do you build the shower system?

wedi's pre-fabricated shower base Riolito Neo features the ONLY fully sealed and factory integrated water-proof linear drain assembly available for customizable shower floor systems today. The integrated drain ensures your installation is not exposed to the risk commonly associated with bonding flange/taping installation-type single drain products. wedi Shower Bases are also available in square point drain models.

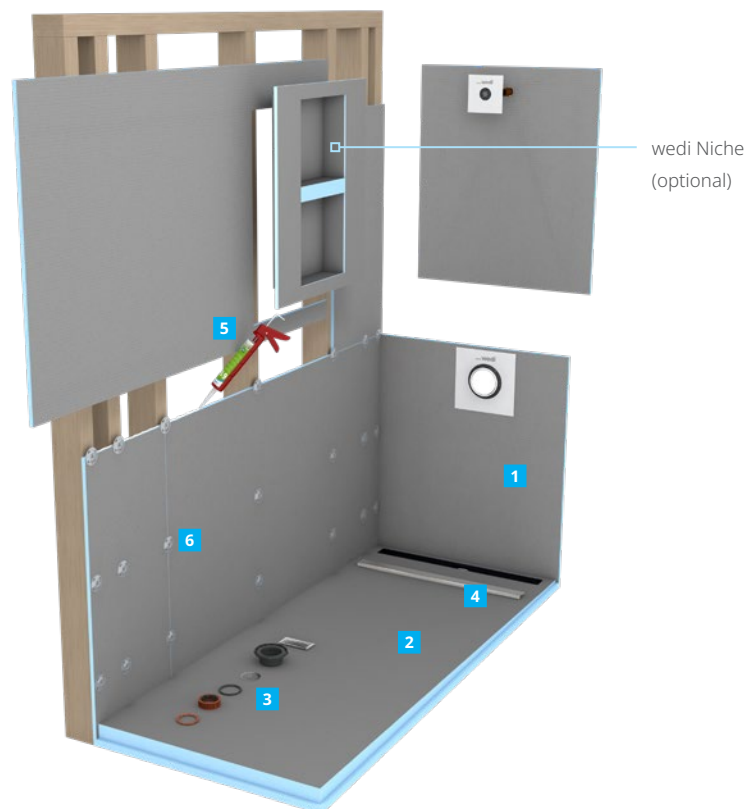


wedi products

- | | |
|---|---|
| 1 wedi Building Board | 4 wedi Fundo Riolito Neo Cover Plate |
| 2 wedi Fundo Riolito Neo Shower Base | 5 wedi 610 adhesive sealant |
| 3 Fundo Click and Seal Drain Kit DN50, DN80, DN100 | 6 wedi Fastener Kit |

How does the product compare?



wedi Building Boards

- Ready to tile out of the box, so it can be assembled on-site with ease.
- Lightweight and easy to cut.
- Does not release toxic silica dust when cutting.
- wedi products have internal engineered waterproofing.
- Seams are adhered and sealed with only the use of wedi Joint Sealant.
- CodeMark certified.

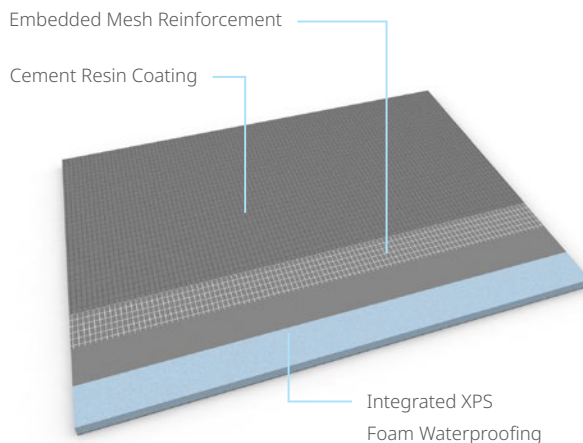


Fiber Cement Board

- Requires additional waterproofing and seam reinforcement before it is ready to tile.
- Is heavy and difficult to cut.
- Provides a food source for both mould and mildew and contains silica dust.
- Requires additional waterproofing membranes.
- All seams require a messy and labour intensive process of a base coat and tape.
- Requires over 24 hours of drying time before tile installation is possible.

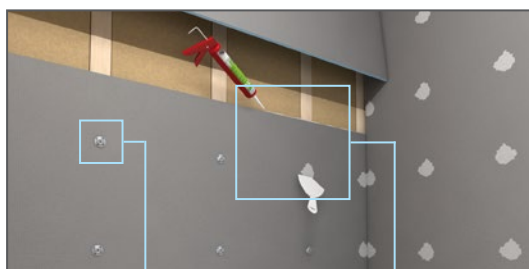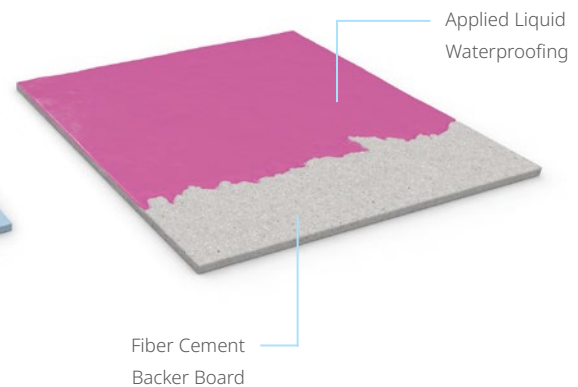

wedi requires 30% fewer fasteners in an installation

No mesh tape or banding makes for a simple and fast installation

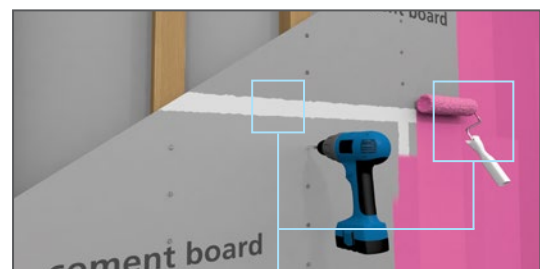

The need for a base coat, tape, and applied waterproofing is time consuming and messy

How does the assembly compare?


wedi Shower Systems

- All components from a single manufacturer.
- All shower bases are pre-sloped and CNC machined.
- Waterproofing is already integrated.
- wedi offers one comprehensive warranty.
- Includes a single, consistent installation process.
- Ready to tile within 4 hours.


Conventional Methods

- Incorporates up to five different manufacturers.
- Slope must be created by hand.
- Applied waterproofing is an added step.
- Multiple manufacturers, multiple drying times and multiple labour warranties.
- Techniques can vary from one installer to another.
- Requires minimum of 4 days before it can be tiled.

wedi Shower Systems

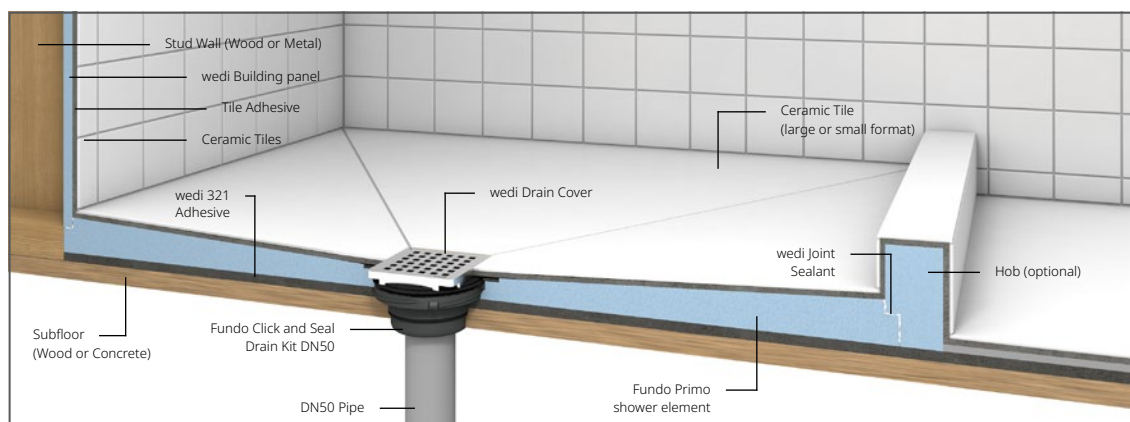

Conventional Methods

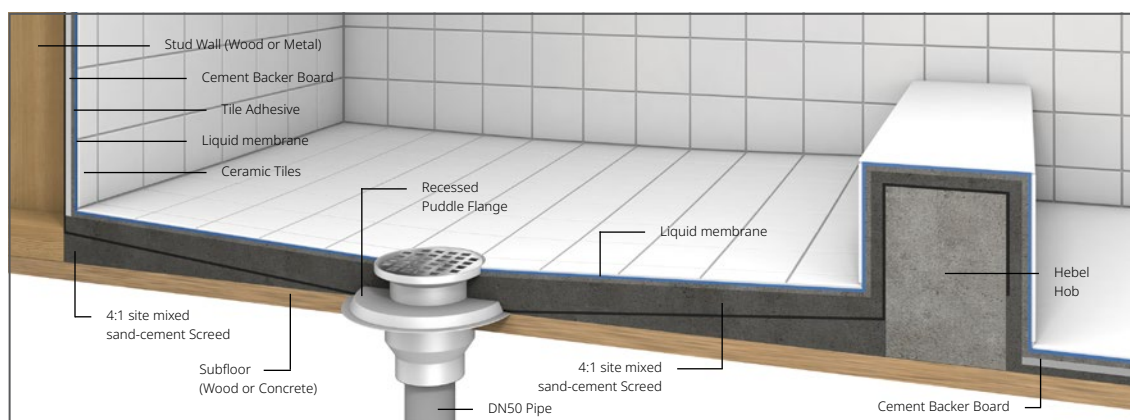



4 DAYS

Sheeting + Screeding
+ Waterproofing

VS.

4 HOURS

wedi Waterproof
Shower System

**Use wedi – Save time and gain peace of mind
on your next bathroom install**



Reduce the installation time from
4 hours ready to tile vs 4 days of
installation and drying time



100 % waterproof and mould
proof shower system from a single
manufacturer

10

10* years full replacement warranty –
backed by wedi



Australian based technical support
and training available



Australian and New Zealand
CodeMark certified



German engineered product proven
for 40 plus years

* 15 years for New Zealand

Comparison sheet for the products required to build a waterproof bathroom

Example: Bathroom size: 2700 × 1800 × 2400 mm (L × W × H) – Shower Size: 1000 × 1000 × 2400 mm (L × W × H)

Shower Installation

	wedi products	Conventional Products and Installation
Wall solution	wedi Building Board 2500 × 1200 × 10 mm	Villaboard / m ²
Shower system	wedi Fundo Primo Shower Base 1000 × 1000 mm	Villaboard Installation / m ²
	Fundo Click and Seal Drain Kit	Drain installation and grate
	wedi Fundo Stainless Steel Cover / Frame	
System accessories	wedi 610 adhesive sealant Sausage 600 ml	Waterproofing membrane / m ² (2 coats wall/floor)
	wedi 321 Adhesive	Waterproofer installation / m ² (2 coats wall/floor/curb)
	wedi Fastener Kit	Fasteners


Bathroom Floor Installation

	wedi products	Conventional Products and Installation
Floor solution	wedi Building Board 1500 × 900 × 6 mm	6 mm tile underlay / m ² Tile underlay installation / m ²
System accessories	wedi 610 adhesive sealant Sausage 600 ml	Waterproofing membrane / m ² (2 coats wall/floor)
	Sealing Tape for the wall / floor junction in bathroom	Waterproofer installation / m ² (2 coats wall/floor/curb)
	wedi 321 Adhesive	Fasteners
	wedi Fastener Kit	

wedi Fundo Shower System – Ready to tile within 4 hours the same day



Conventional Shower Installation – Ready to tile in 4 days *

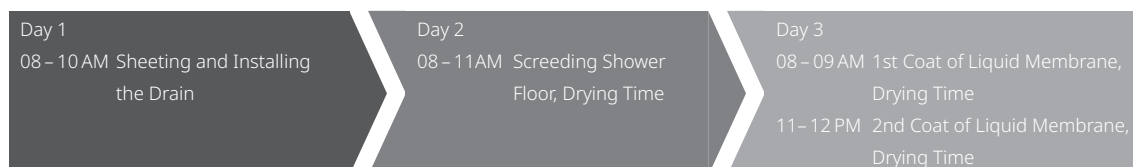

* May vary and might be longer as those measures are a generic time frame. Please check with your manufacturer to receive the accurate information for your jobsite.

Overview wedi Fundo Shower Bases

The wedi system includes a large number of shower elements that can be used in all wet areas. On the following pages you get a short and compact overview of the various wedi Fundo Shower Bases with point and linear drainage as well as detailed technical information on dimensions and gradient details in the form of technical drawings. This will enable you to plan precisely and you are always on the safe side.

wedi Fundo Primo Shower Bases



914 × 914 × 40 mm
wedi order no. 073742100 | ARDEX code 48897

1020 × 1020 × 40 mm
wedi order no. 073736250 | ARDEX code 48883

1220 × 1220 × 40 mm
wedi order no. 073736252 | ARDEX code 48885

1524 × 1524 × 40 mm
wedi order no. 073742102 | ARDEX code 48880



1220 × 1020 × 40 mm
wedi order no. 073736251 | ARDEX code 48884

914 × 1524 × 40 mm
wedi order no. 073742104 | ARDEX code 48877

914 × 1828 × 40 mm
wedi order no. 073742106 | ARDEX code 48882

1219 × 1524 × 40 mm
wedi order no. 073742105 | ARDEX code 48879

1219 × 1828 × 40 mm
wedi order no. 073742107 | ARDEX code 48878

1524 × 1828 × 40 mm
wedi order no. 073742103 | ARDEX code 48881



1820 × 920 × 50 mm
wedi order no. 073736253 | ARDEX code 48886

wedi Fundo Ligno Shower Bases



1020 × 1020 × 20 mm
wedi order no. 073732300 | ARDEX code 48864

1220 × 1220 × 20 mm
wedi order no. 073732302 | ARDEX code 48876

1524 × 1524 × 20 mm
wedi order no. 073742083 | ARDEX code 48863



1220 × 1020 × 20 mm
wedi order no. 073732301 | ARDEX code 48865

914 × 1524 × 20 mm
wedi order no. 073742084 | ARDEX code 48862

1219 × 1524 × 20 mm
wedi order no. 073742085 | ARDEX code 48892

wedi Fundo Riolito Neo / Riolito Shower Bases



1220 × 1020 × 50 mm
wedi order no. 075100120 | ARDEX code 48891



1219 × 1524 × 65 mm
wedi order no. 075100171 | ARDEX code 48887



1524 × 914 × 50 mm
wedi order no. 075100170 | ARDEX code 48890
1828 × 1219 × 60 mm
wedi order no. 075100172 | ARDEX code 48889

wedi Extension Panels




1200 × 600 × 50/60 mm
wedi order no. 073732050 | ARDEX code 48757

608,6 × 1230,9 × 53/40 mm
wedi order no. 073783528 | ARDEX code 48791

317,5 × 1841,5 × 46,6/40 mm
wedi order no. 073783523 | ARDEX code 48771


1524 × 304,8 mm
wedi order no. 073732030 | ARDEX code 48756

wedi Hobs



1200 × 50 × 60 mm
wedi order no. 074311010 | ARDEX code 48772

wedi Balcono

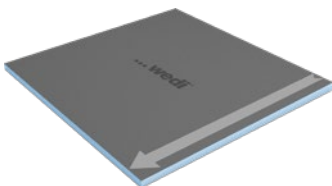

1200 × 1200 × 20/35 mm
wedi order no. 073737071 | ARDEX code 48843


1200 × 1200 × 35/50 mm
wedi order no. 073737072 | ARDEX code 48844




1200 × 210 × 20 mm
wedi order no. 073737070 | ARDEX code 48842

wedi Fundo Primo Shower Bases


wedi Fundo Primo, Dimensions: 914 × 914 × 40 mm

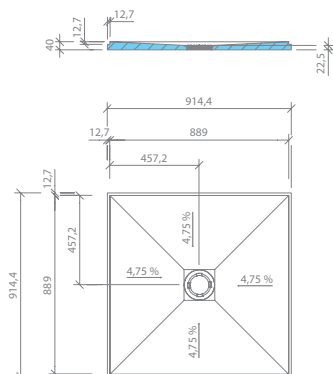


wedi Fundo Primo, Dimensions: 1020 × 1020 × 40 mm

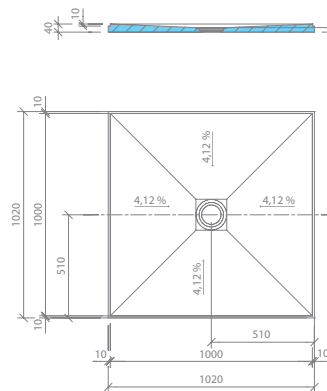


wedi Fundo Primo, Dimensions: 1220 × 1220 × 40 mm

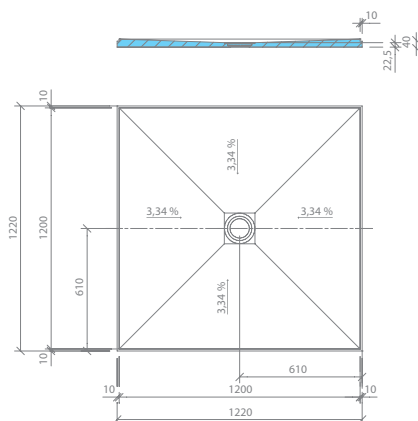


wedi Fundo Primo, Dimensions: 1524 × 1524 × 40 mm

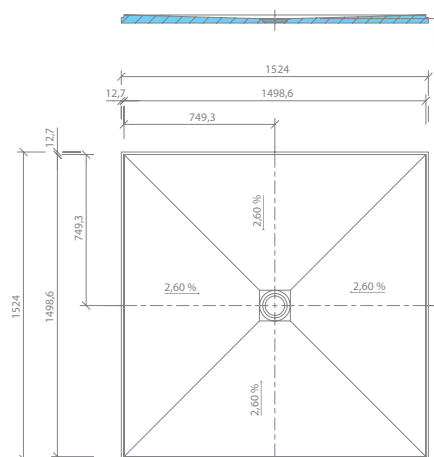

wedi Fundo Primo, Dimensions: 1220 × 1020 × 40 mm

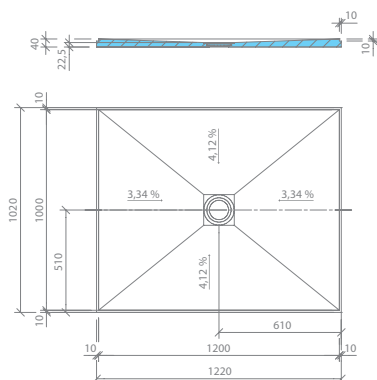


wedi Fundo Primo, Dimensions: 914 × 1524 × 40 mm

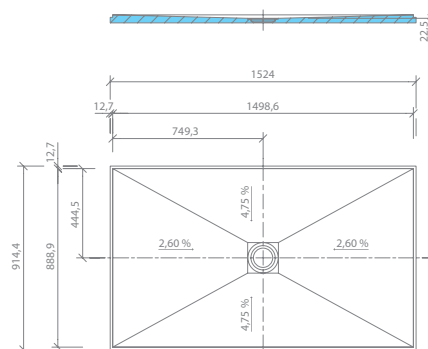


wedi Fundo Primo Shower Bases


wedi Fundo Primo, Dimensions: 914 × 1828 × 40 mm

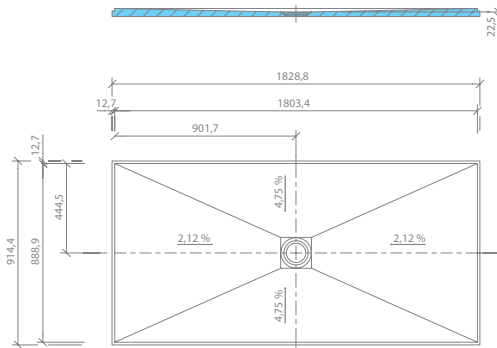


wedi Fundo Primo, Dimensions: 1219 × 1524 × 40 mm

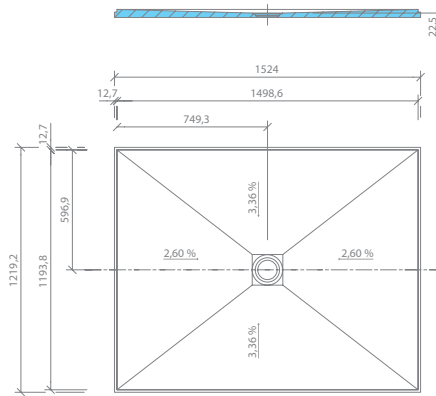


wedi Fundo Primo, Dimensions: 1219 × 1828 × 40 mm

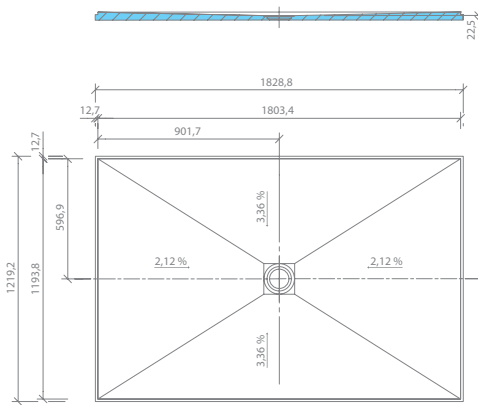

wedi Fundo Primo, Dimensions: 1524 × 1828 × 40 mm

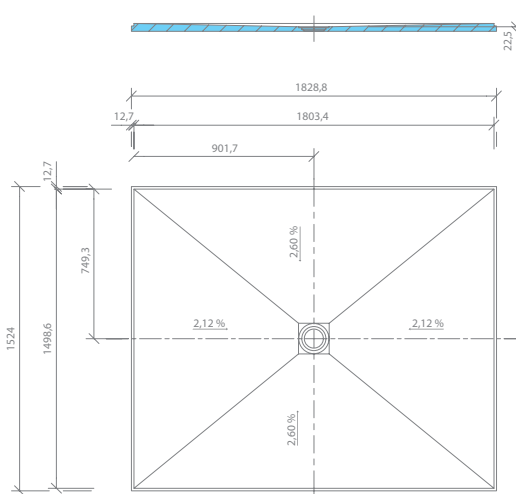


wedi Fundo Primo, Dimensions: 1820 × 920 × 50 mm

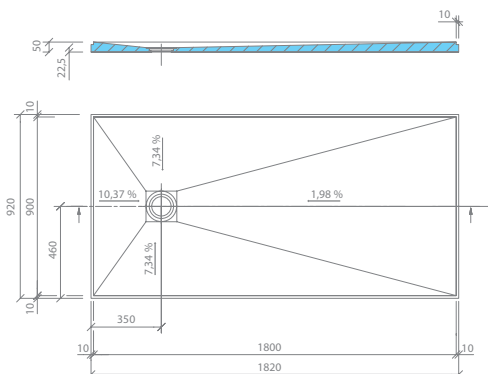


wedi Fundo Ligno Shower Bases


wedi Fundo Ligno, Dimensions: 1020 × 1020 × 20 mm

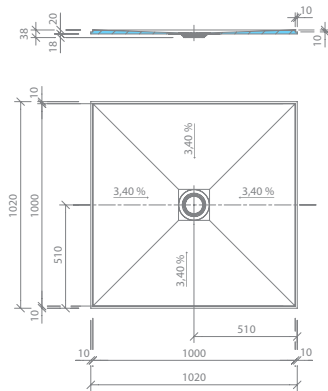


wedi Fundo Ligno, Dimensions: 1220 × 1220 × 20 mm

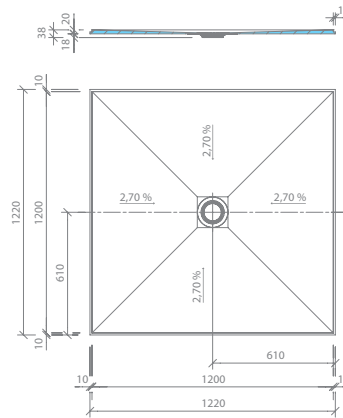


wedi Fundo Ligno, Dimensions: 1524 × 1524 × 20 mm

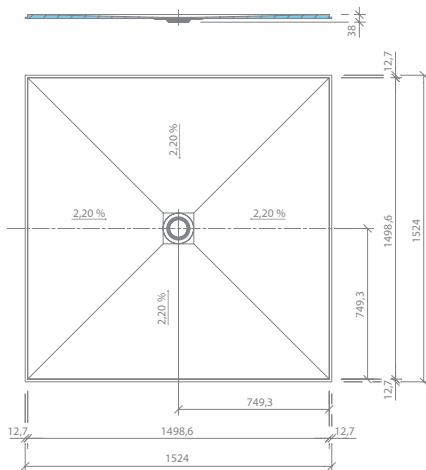


wedi Fundo Ligno, Dimensions: 1220 × 1020 × 20 mm

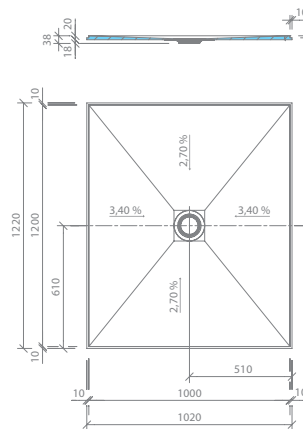

wedi Fundo Ligno, Dimensions: 914 × 1524 × 20 mm




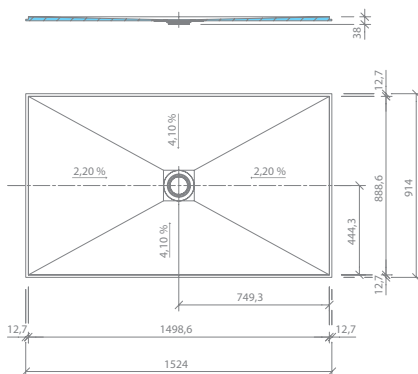


wedi Fundo Ligno, Dimensions: 1219 × 1524 × 20 mm

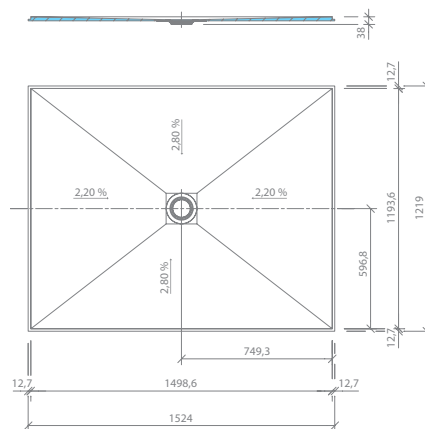




wedi® Subliner Dry

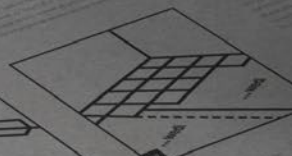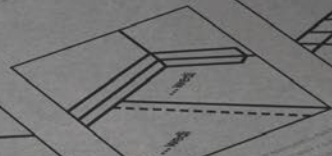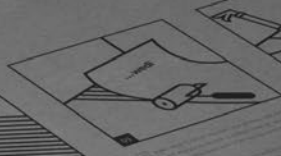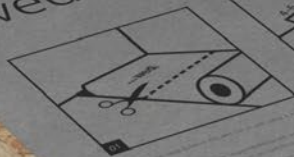


wedi Fundo Riolito Neo / Riolito Shower Bases


wedi Fundo Riolito Neo, Dimensions: 1220 × 1020 × 50 mm

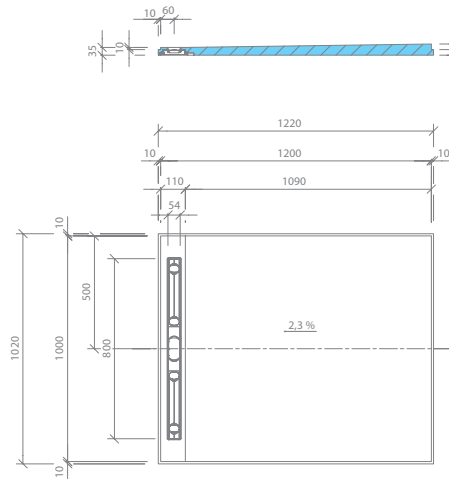


wedi Fundo Riolito, Dimensions: 1219 × 1524 × 65 mm

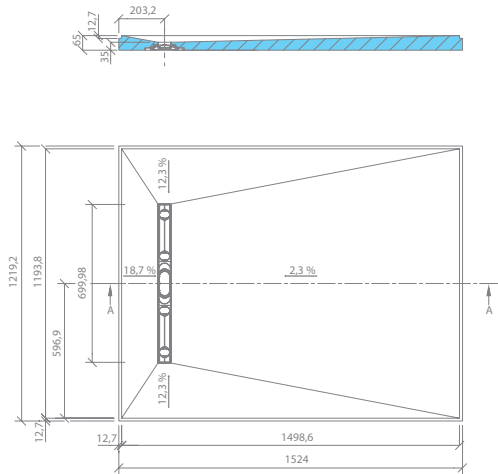

wedi Fundo Riolito, Dimensions: 1524 × 914 × 50 mm

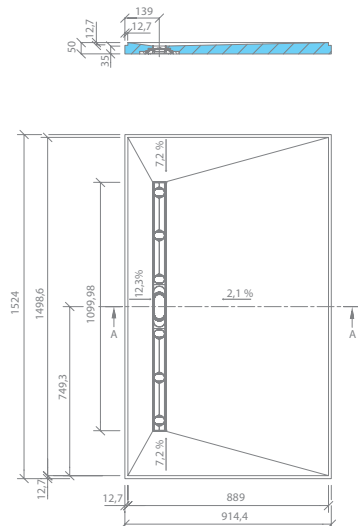


wedi Fundo Riolito, Dimensions: 1828 × 1219 × 60 mm

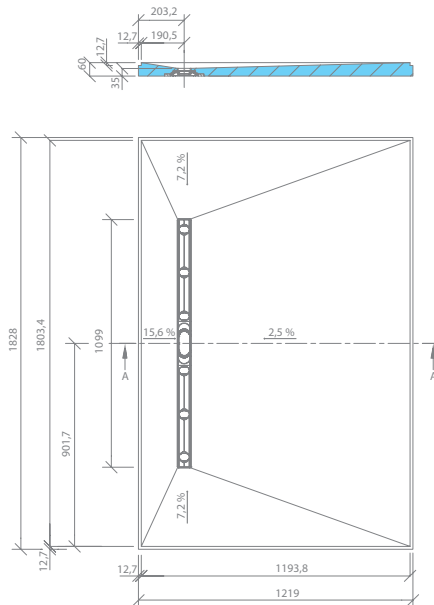


wedi Extension Panels

wedi Extension Panels,
Dimensions: 1200 × 600 × 50/60 mm

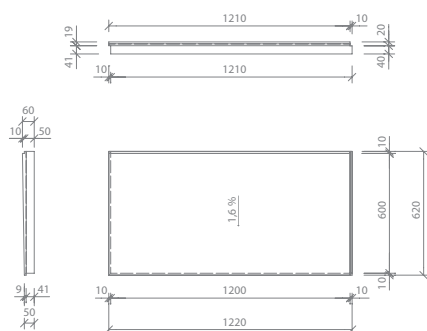


wedi Extension Panels,
Dimensions: 608 × 1230 × 53/40 mm

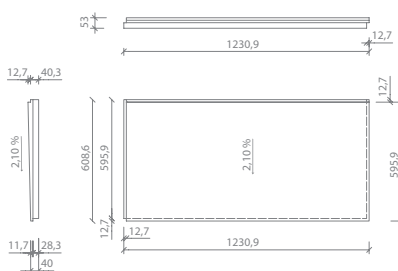


wedi Extension Panels

wedi Extension Panels,
 Dimensions: 317 × 1841 × 46 / 40 mm

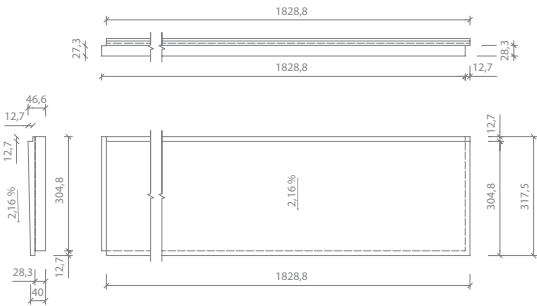


wedi Extension Panels,
 Dimensions: 1524 × 204 × 26 / 20 mm

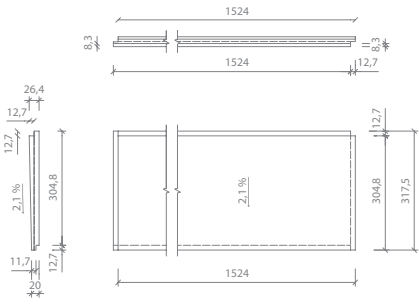


wedi Balcono


wedi Balcono, Dimensions: 1200 × 1200 × 20 / 35 mm

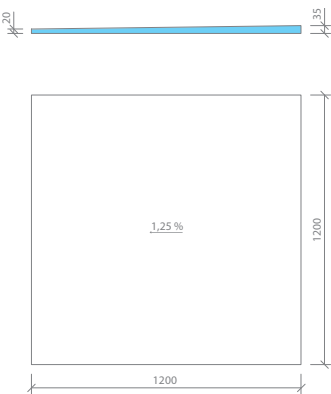

wedi Balcono, Dimensions: 1200 × 1200 × 35 / 50 mm

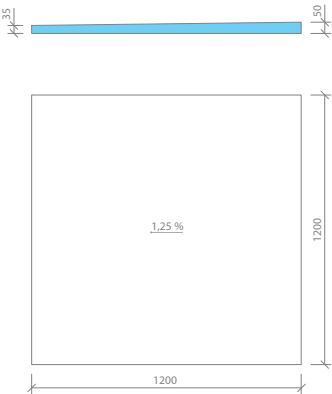

wedi Balcono channel element, Dimensions: 1200 × 210 × 20 mm

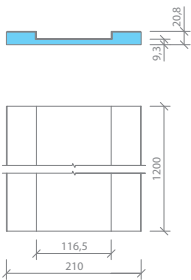

Where to find wedi products

- wedi products are available at distributors nationwide in all major Australian cities.
- Speak to your local representative to find your nearest distributor.





Where to find the
wedi sales team
in Australia and
New Zealand

How to get started with wedi

- Talk to your specialist tradesmen and tradeswomen about using wedi on your next build.
- Contact your local wedi representative about pricing, warranties, and certification programs.
- Schedule one-on-one job-site install assistance for your installer with your wedi representative.



Did you know?

Outstanding quality installation results depend on not only having great products to use, but the knowledge and expertise in their use of wedi.

We have trained a variety of installers around Australia and New Zealand, who are now experts in this field. This educational service is offered to licensed contractors. In addition, our local wedi Technical Sales Support Managers will come to site to guide with your first wedi shower installation, ensuring the ease and quality of our system.

wedi has been the first and only XPS foam shower system that achieved the CodeMark certification in Australia and New Zealand, which guarantees you a non-contestable compliance and mandatory approval.

The CodeMark provides mandatory acceptance by building control authorities, which other forms of evidence, such as product opinion and appraisals do not have. It shows a clear demonstration that the wedi products, as a full system, meets the mandatory compliance requirements of Australia and New Zealand.

wedi-quality and performance certified by:



Be sure to ask for:



Certified wedi Installer



ARDEX AUSTRALIA PTY LTD

📍 2 Buda Way
Kemps Creek NSW 2178

☎ Phone: 1300 788 780

✉ technicalservices@ardexaustralia.com

🌐 www.ardexaustralia.com

ARDEX New Zealand

📍 19 Alfred Street
Onehunga
Auckland 1061

☎ Phone: 0800 227 339

✉ orders@ardexnz.com

wedi GmbH

📍 Hollefeldstraße 51
48282 Emsdetten
Germany

☎ + 49 25 72 156-0

✉ info@wedi.de

🌐 www.wedi.net

Version 5, August 2026

AU

NZ